


240v 6 Slice Toaster Instructions



240v 6 Slice Toaster

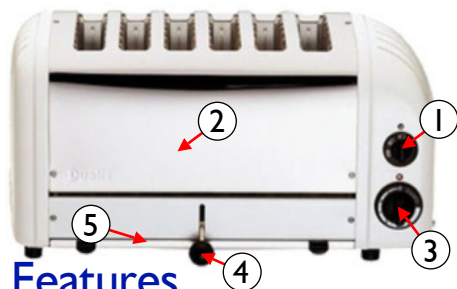

Features

- 1) Slot selector switch
- 2) Stainless steel cover
- 3) Time switch knob
- 4) Ejector knob
- 5) Slide out crumb tray

POWER : 3kW, 220-240V, 13 Amp single phase. Mains power - plug supplied.

CAPACITY : 2, 4 or 6 slices, 195 Slices per hour

DIMENSIONS

External : 210(h) x 220(w) x 460(d)mm.

WARNING

This appliance gets very hot. Take special care when children or elderly people are present. Take care NOT to touch the top or sides of the toaster as these areas get extremely hot, and will result in burns.

Caution

- 1) Heating up a slot that has not been loaded with bread may damage the elements and cause uneven toasting.
- 2) Do not attempt to dislodge bread when the toaster is plugged in.
- 3) Do not leave the toaster unattended when in use.
- 4) Do not use if the crumb tray or base plate are missing or are incorrectly fitted.

Useage

- 1) Select the number of slices to be toasted on the selector switch.
- 2) Lift the black Ejector knob to the up position.
- 3) Starting from left to right, insert bread into all slots brought into operation by the selector switch.
- 4) Turn the time knob clockwise to the required number on the dial.

1.5 = Lightly browned toast

2.0 = Medium toast

2.5 = Well done toast

(Add more time for brown bread)

When the toaster is cold set the time switch a little higher as the metal body will absorb heat.

When the toaster is warmed up reduce the time.

- 5) As soon as the Time switch is rotated the automatic timing will start and the red neon light will illuminate.
- 6) When the timer reaches zero (or is turned back manually), the neon light and heating elements will switch off automatically.

The toast will not pop up, but will remain warm inside the toaster.

- 7) Press down the round Ejector knob and the toast will pop up ready for serving.

To reheat recently made toast set timer to approx. 0.5 setting.

To toast frozen bread increase toasting time by 1.0.

NOTE: When the toaster is used there may be a slight popping crinkling sound, this is due to heat expansion of the element surface and is NOT a fault.

Cleaning

- 1) Unplug the toaster and allow to cool down before cleaning.
- 2) Remove crumb tray and clean at the end of each session.
- 3) Crumbs should be carefully brushed off the elements (using only a soft cloth)
- 4) Turn the toaster upside down and shake out.
- 5) Never insert a fork or other sharp instrument to remove torn pieces of bread as the heating elements may be damaged
- 6) Use a damp cloth to wipe off the outside surfaces of the toaster.
- 7) DO NOT use an abrasive cleaner.
- 8) This toaster must not be immersed in water or cleaned with a water jet.

Electrical & Gas Safety Instructions



SAFETY INSTRUCTIONS - PLEASE READ

Before Starting Work

- ✓ CHECK ALL YOUR EQUIPMENT. DO NOT USE ANYTHING FOUND DAMAGED.
- ✓ CHECK THAT THE PLUG / REGULATOR ON THE EQUIPMENT MATCHES THE SUPPLY.
- ✓ DO NOT TRY TO IMPROVISE CONNECTIONS.
- ✓ KEEP ELECTRICAL EQUIPMENT AWAY FROM RAIN, WATER AND GAS.
- ✓ MAKE SURE YOU KNOW HOW TO USE THE EQUIPMENT.
- ✓ YOU NEED TO KNOW HOW TO TURN IT OFF.

General Safety

- ✓ READ AND COMPLY WITH THE INSTRUCTION LEAFLET OR LABEL BEFORE USING THE EQUIPMENT.
- ✓ TAKE ALL SAFETY PRECAUTIONS REQUIRED AND RECOMMENDED.
- ✓ DO NOT REMOVE OR BYPASS GUARDS OR SAFETY DEVICES FITTED TO THE EQUIPMENT.
- ✓ USE ONLY THE CORRECT ACCESSORIES.
- ✓ DO NOT OVERLOAD THE EQUIPMENT.
- ✓ KEEP EQUIPMENT CLEAN. PLACE AWAY FROM WORK AREA IF POSSIBLE.
- ✓ WEAR APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT AT ALL TIMES.
- ✓ REMEMBER SOME CATERING EQUIPMENT MAY GET HOT IN USE.
- ✓ ALLOW TO COOL BEFORE HANDLING.
- ✓ TAKE SPECIAL CARE WHEN CHILDREN OR ELDERLY PEOPLE ARE PRESENT.
- ✓ TAKE CARE NOT TO TOUCH THE TOP OR SIDES OF ANY HOT EQUIPMENT, AS THIS WILL RESULT IN BURNS.

Safety Notice

PLEASE NOTE THIS MACHINE IS INTENDED FOR STATIC USE ONLY. ONCE CONNECTED TO ELECTRICITY AND OR LPG GAS SUPPLY IT SHOULD NOT BE MOVED. SOME GENERATORS SUPPLY 240V, 415V AND 110V. PLEASE CHECK FOR CORRECT VOLTAGE BEFORE USE.

LPG Safety

- ✓ CONNECT PROPANE REGULATORS WITH THE SPANNER PROVIDED. DO NOT USE TOOLS WHICH MAY DAMAGE THE REGULATOR.
- ✓ ALWAYS TREAT REGULATORS AND HOSES WITH CARE.
- ✓ ALWAYS KEEP GAS CYLINDERS UPRIGHT AND TURN OFF AT GAS VALVE ON CYLINDER BEFORE DISCONNECTING FROM THE MACHINE.
- ✓ USE ONLY THE GAS INDICATED ON THE MACHINE OR BY R & R CATERING HIRE LTD.
- ✓ DIRECT MACHINE AWAY FROM FLAMMABLE MATERIALS.
- ✓ SHOULD A GAS LEAK BE SUSPECTED, CLOSE THE CYLINDER VALVE AND EXTINGUISH ALL NAKED FLAMES. TURN THE CYLINDER BACK ON IN ORDER TO LOCATE THE LEAK BY APPLYING SOAPY WATER AND CHECK FOR BUBBLES OF ESCAPING GAS. NEVER USE A NAKED FLAME.

**IF THE EQUIPMENT IS FAULTY
PLEASE DO NOT REPAIR IT!
CONTACT US ON
01242 820100**

240v Electrical Safety

- ✓ ELECTRICITY IS DANGEROUS AND MUST ALWAYS BE USED WITH GREAT CARE.
- ✓ WATER AND ELECTRICITY MAKE A VERY DANGEROUS COMBINATION, TAKE GREAT CARE IN KEEPING THEM APART.
- ✓ USE THE EQUIPMENT ONLY FOR THE PURPOSE FOR WHICH IT WAS DESIGNED.
- ✓ CARELESSNESS OR MISUSE COULD CAUSE ELECTRIC SHOCK OR FIRE.
- ✓ IT IS ADVISED TO USE A RESIDUAL CURRENT DEVICE WITH ALL 240V APPLIANCES.
- ✓ CHECK YOUR SUPPLY FOR SUFFICIENT AMPAGE BEFORE USING EQUIPMENT WITH A HEATING ELEMENT.